 
 


## 1 Parts description

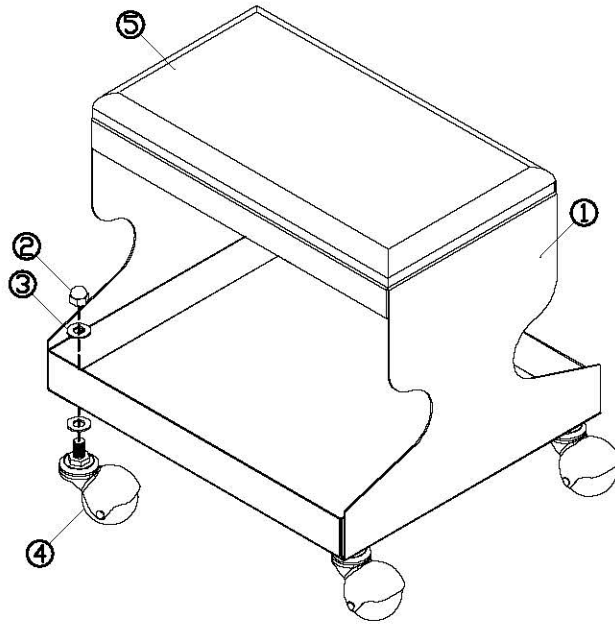

NO.	PART	Q'TY
①	Working chair body	1
②	Nut	4
③	Washer	8
④	Ball wheel	4
⑤	Seat	1
⑥	Open wrench	1

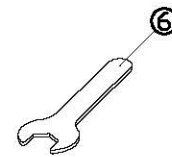


## 2 Assembly

1. Please install nut ②, washer ③, ball wheels ④, and check its torque up to 10Nm.
2. Make sure there is no gap between the washer and working chair.
3. Make sure the ball wheel is firmly installed on the working chair body.


## 3 Instruction

1. Please check the tightness of the nut and the ball wheel is stable regularly.
2. Please sit on working chair and confirm that the four ball wheels touch the ground at any time.
3. Only use working chair at low speeds rather than at slope or for racing.
4. Make sure the working chair is in safe space and stable after using.
5. Make sure the ground is flat when using the working chair.

## 1 零件明細

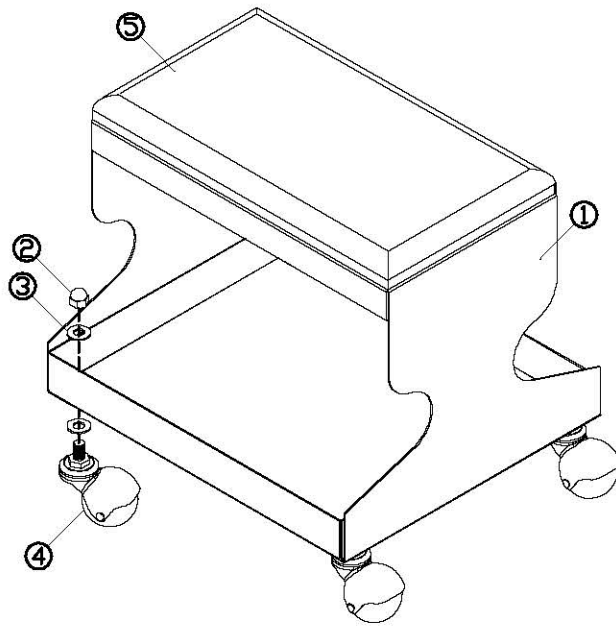

編號	名稱	數量
①	工作椅本體	1
②	螺帽	4
③	墊片	8
④	活動輪	4
⑤	坐墊	1
⑥	開口扳手	1

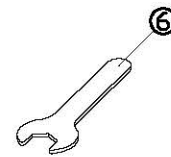

## 2 組裝步驟

1. 請將螺帽 ②、墊片 ③、球型輪 ④、依序組裝，並確認扭力值達到10Nm。
2. 請確認墊片與工作椅本體之間無任何縫隙。
3. 請確認球型輪已穩固地固定於工作椅本體上。

## 3 使用說明

1. 請定期檢查螺帽與球型輪是否穩固。
2. 請坐於工作椅上並確認四顆球型輪同時接觸地面。
3. 工作椅僅限於慢速移動使用，請勿於斜坡或競速使用。
4. 使用完畢後請歸定位並確實固定，避免工作椅任意移動。
5. 請使用於平整的地面。