

**Bench-mounted assembly steps**

 For safety considering, have to apply screws to fix completely, to prevent any hazards might happen when apply 2-IN-1 Mounted Type Work Stand

Visit operation detail at Super B  
Website: <http://www.superbiketool.com/>,  
Click Product → Work stand → 2. → TB-WS35



**Wall-mounted assembly steps**

 **Screw**  
(For wood bench)  
10 x 75mm, 4pcs

 **Screw**  
(For wood wall)  
10 x 75mm, 4pcs

**1 Clamp instruction**

1. Loosen the knob a little bit.
2. Pull out the knob and turn the clamp to proper position.
3. Unhand the knob and let it push back to position the clamp.
4. Screw the knob to fix the clamp exactly.

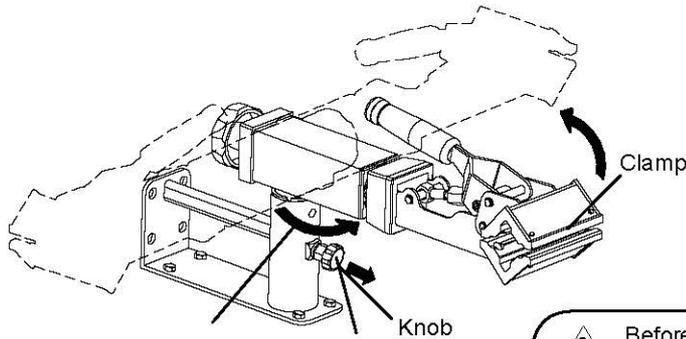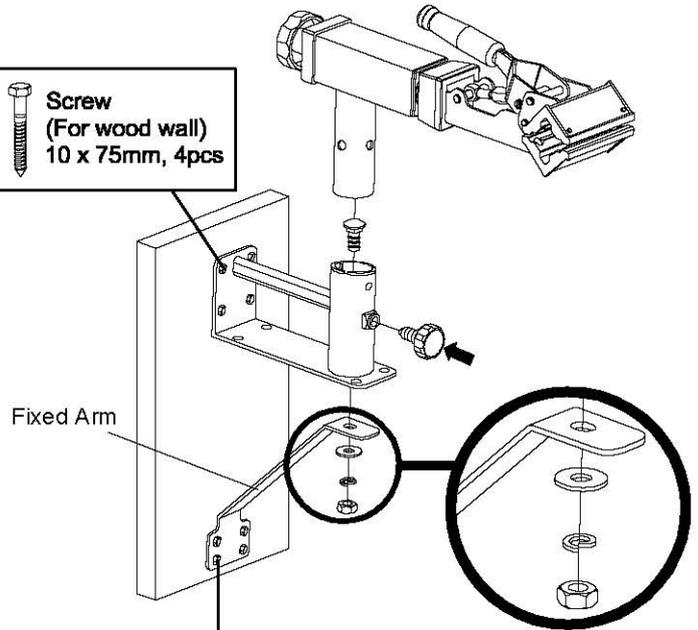

 **Screw**  
(For wood wall)  
8 x 50mm, 4pcs

- (Packed in a bag)
-  Carriage bolt\*1PC
  -  M10 Washer\*1PC
  -  M10 Lock washer\*1PC
  -  Nut\*1PC


 Before operation, make sure the clamp at proper position and the knob has been tightened

**2 Adjust the clamp**

1. Pull up the handle to open the clamp. (see picture 1)
2. Place the frame into the opening of the clamp. (It could be the top tube, seat tube and standing tube) and adjust the hex adjusting shaft to proper position then press down the handle to hold the frame.

- Adjustment:
- 2-1. Rotate the hex adjusting shaft clockwise to tighten the clamp properly, making the opening of the clamp smaller. (see picture 2)
  - 2-2. Rotate the hex adjusting shaft counter-clockwise to loosen the clamp properly, making the opening of the clamp bigger. (see picture 2)

 To be sure the tube is tightened before work


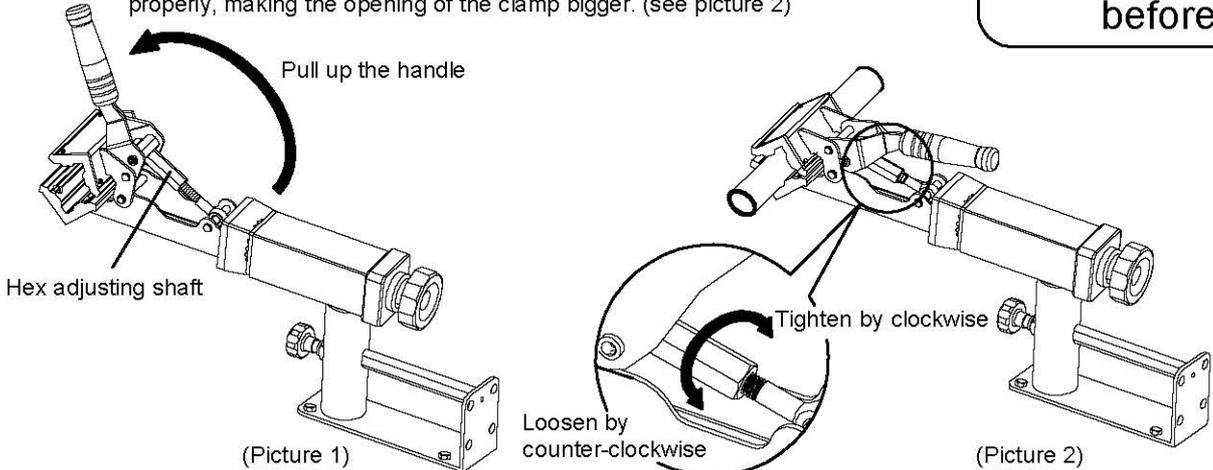


**桌式組裝**

 使用二合一 桌壁式維修夾台，基於安全性考量，必須用螺絲確實鎖固，以避免發生危險


**壁式組裝**

詳細操作影片請至 Super B 官網  
<http://www.superbiketool.com/>  
觀看，點擊 Product → Work stand → 2. → TB-WS35

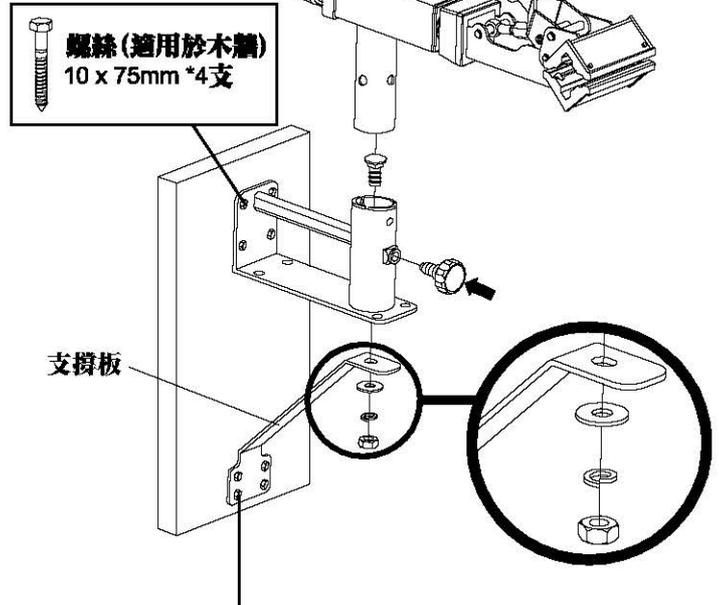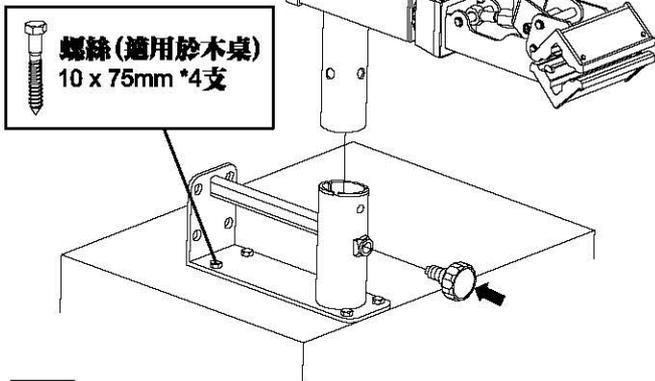

**1 夾頭使用功能說明**

1. 放鬆拉銷旋鈕。
2. 將拉銷旋鈕拉開，並轉動夾頭至適當的位置。
3. 放掉拉銷旋鈕使它自動彈回契合，以達夾頭定位功能。
4. 適當地鎖緊拉銷旋鈕固定夾頭。


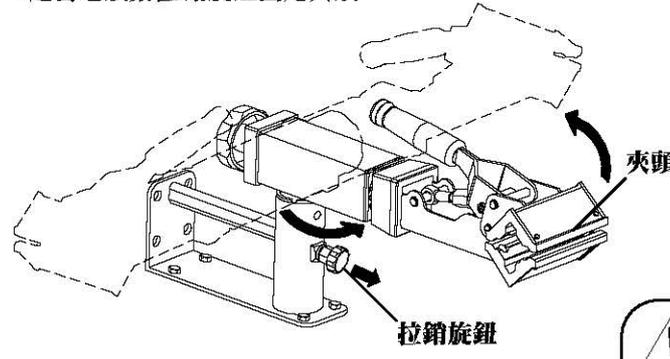


- 螺絲 (適用於木牆) 8 x 50mm \*4支
- (此框內零件一個袋子包裝)
- 馬車螺絲\*1PC
  - M10華司\*1PC
  - M10彈簧華司\*1PC
  - 螺帽\*1PC

 需確定夾頭已達定位，並將拉銷旋鈕鎖緊後才可以使用的

**2 夾頭開口調整方式**

1. 上拉握把，打開夾頭。(如圖一所示)
2. 將車管(可選擇車架上管/立管/座管)放入夾頭開口，並依車管尺寸將六角調整軸旋轉至適當位置，再將握把下壓固定車管。  
調整方式：  
2-1. 依圖所示將六角調整軸順時針旋轉，可適度鎖緊夾頭，使夾頭開口變小。(如圖二所示)  
2-2. 依圖所示將六角調整軸逆時針旋轉，可適度放鬆夾頭，使夾頭開口變大。(如圖二所示)

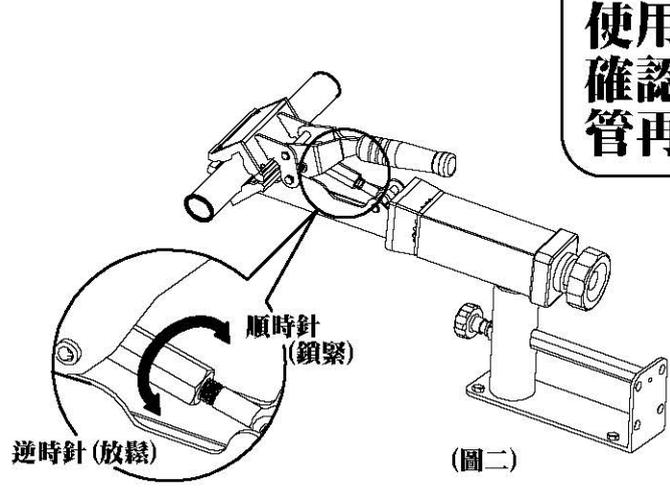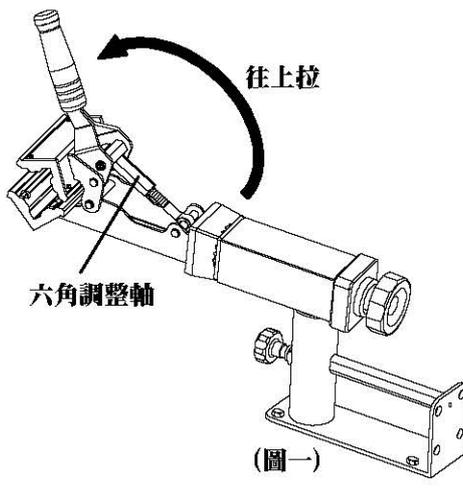

 使用時，務必確認已夾緊車管再執行工作