


## 1 Clamp adjustment and folding

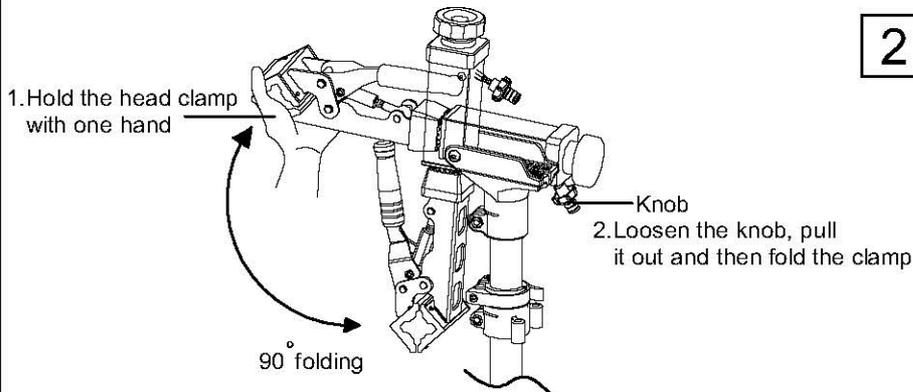


Visit operation detail at Super B

Website: <http://www.superbiketool.com/>,

Click Product → Work stand → 1. → TB-WS30


## 2 Tool tray assembly

1. Loosen the quick release lever.
2. Place the tool tray into the 2-ear (hole) collar. (see picture 1)
3. Fasten the quick release lever. (see picture 1)

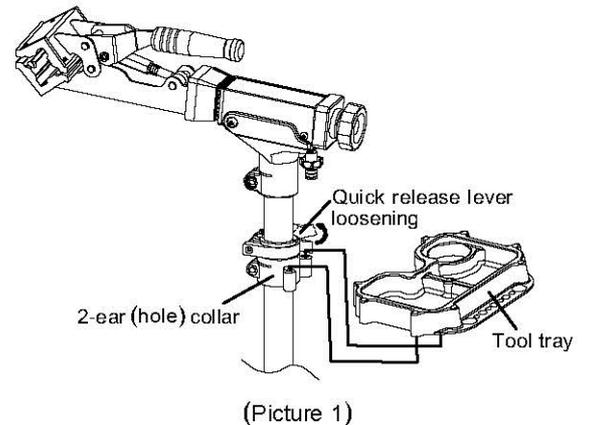

## 3 The direction of clamp

The direction of clamp must be in alignment with the tripod. (see picture 2)


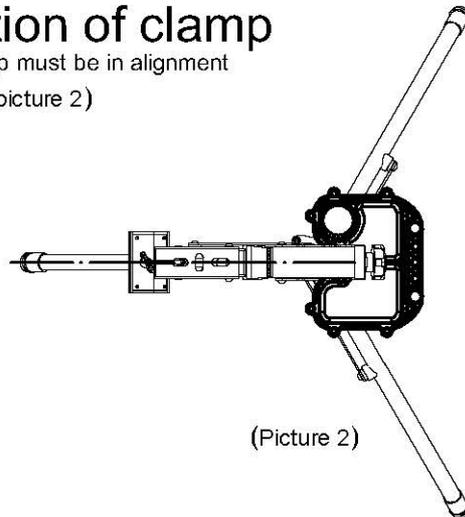


## 4 Adjust the clamp

1. Pull up the handle to open the clamp. (see picture 3)
2. Place the frame into the opening of the clamp (it could be the top tube, seat tube and standing tube) and adjust the hex adjusting shaft to proper position then press down the handle to hold the frame.

Adjustment:


- 2-1. Rotate the hex adjusting shaft clockwise to tighten the clamp properly, making the opening of the clamp smaller. (see picture 4)
- 2-2. Rotate the hex adjusting shaft counter-clockwise to loosen the clamp properly, making the opening of the clamp bigger. (see picture 4)

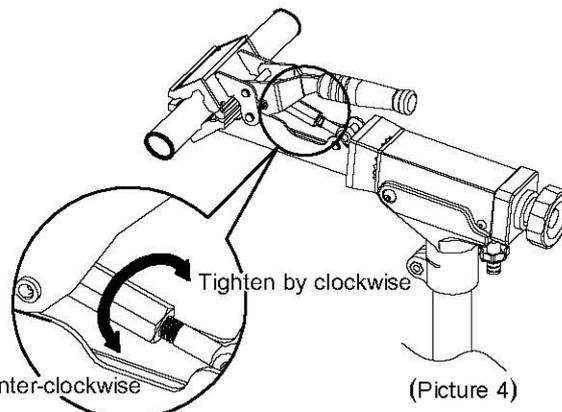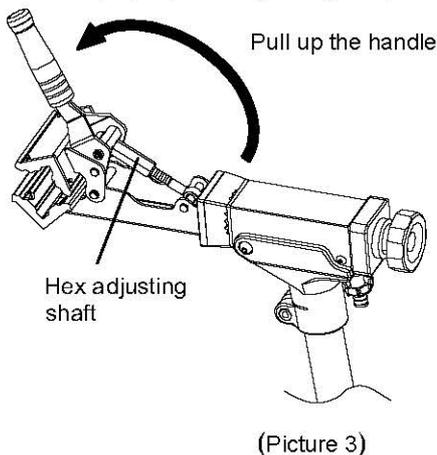

To be sure the tube is tightened before work


詳細操作影片請至 Super B  
官網 <http://www.superbiketool.com/> 觀看，點擊  
Product → Work stand → 1. → TB-WS30

## 1 夾頭調整收折

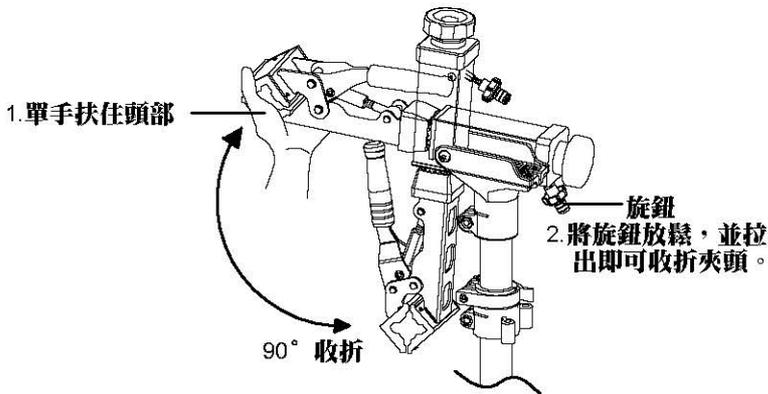


## 3 夾頭方向

使用修車架時，請注意夾頭須與腳架成一直線。(如圖二所示)

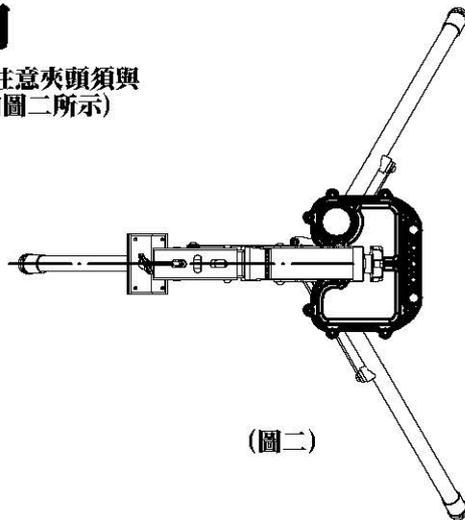

## 2 安裝工具盤

1. 將快拆放鬆。
2. 再將工具盤卡入雙耳管束。(如圖一所示)
3. 再將快拆扣緊。(如圖一所示)

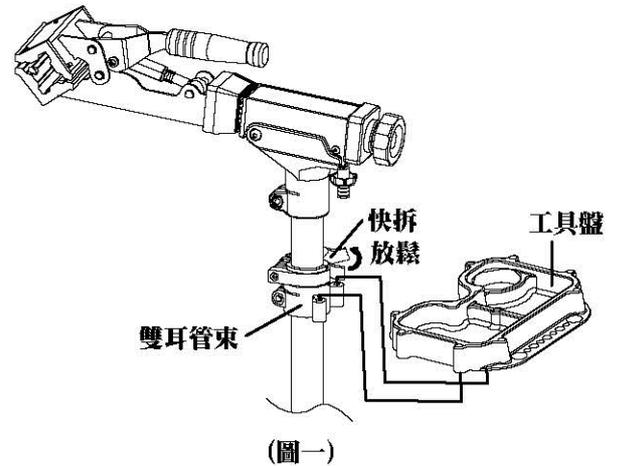


## 4 夾頭開口調整方式

1. 上拉握把，打開夾頭。(如圖三所示)
2. 將車管(可選擇車架上管/立管/座管)放入夾頭開口，並依車管尺寸將六角調整軸旋轉至適當位置，再將握把下壓固定車管。

調整方式：

1. 依圖所示將六角調整軸順時針旋轉，可適度鎖緊夾頭，使夾頭開口變小。(如圖四所示)
2. 依圖所示將六角調整軸逆時針旋轉，可適度放鬆夾頭，使夾頭開口變大。(如圖四所示)



**使用時，務必  
確認已夾緊車  
管再執行工作**

